


SAMSUNG

Operating Instructions

VACUUM CLEANER

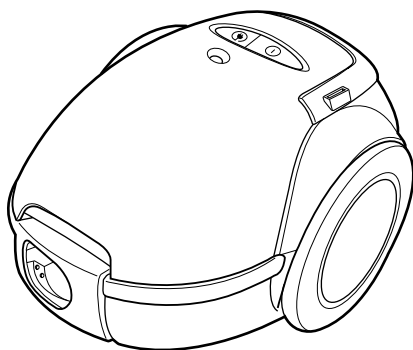

✿ Before operating this unit, please read the instructions carefully.

FEATURES

It has many desirable features, such as automatic cord rewind, dust indicator, remote power control (Only remote control type) and others.

NOTE : Not all models have the same features.



IMPORTANT SAFEGUARDS

1. Read all instructions carefully. Before switching on, make sure that the voltage of your electricity supply in the name as that indicated on the rating plate on the bottom of the cleaner.
2. **WARNING:** Do not use the vacuum cleaner when rug or floor is wet.
3. Close supervision is necessary when any appliance is used by or near children, do not allow the vacuum cleaner to be used as a toy or to run unattended at any time. Use the vacuum cleaner only for its intended use as described in the instructions.
4. Do not use the vacuum cleaner without a dust bag. Change the dust bag frequently when picking up very fine materials such as powder. Change the dust bag before it is excessively full in order to maintain best efficiency.
5. Do not use the vacuum cleaner to pick up matches, live ashes or cigarette butts. Keep the vacuum cleaner away from stoves or heat sources. Heat can deform and discolour the plastic parts of the unit.
6. Avoid picking up hard, sharp objects with the vacuum cleaner as they may damage the cleaner's parts. Do not stand on the hose assembly or put a weight on the hose or block the suction or the exhaustion part.
7. Switch the vacuum cleaner off at the machine before unplugging from the electrical outlet. Grasp the plug to disconnect from power outlet to avoid damage to cord, plug, prongs or socket. Always disconnect cord from electrical outlet before changing the dust bag or servicing the cleaner.
8. The use of an extension cord is not recommended.
9. If your vacuum cleaner is not operating correctly, switch off the power supply and consult an authorized service agent.
10. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

Warning


1. This hose contains electrical connections (only remote control type)
2. Do not use to suck up water.
3. Do not immerse in water for cleaning.
4. The hose should be checked regularly and must not be used if damaged.

IDENTIFICATIONS PARTS

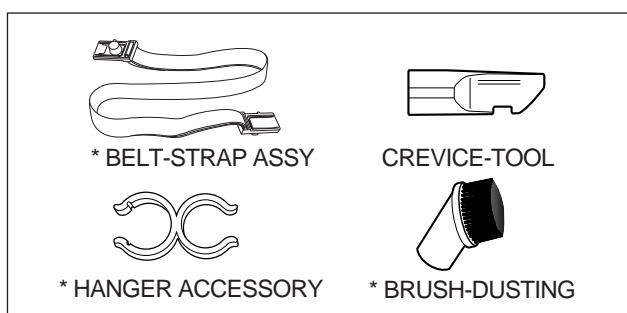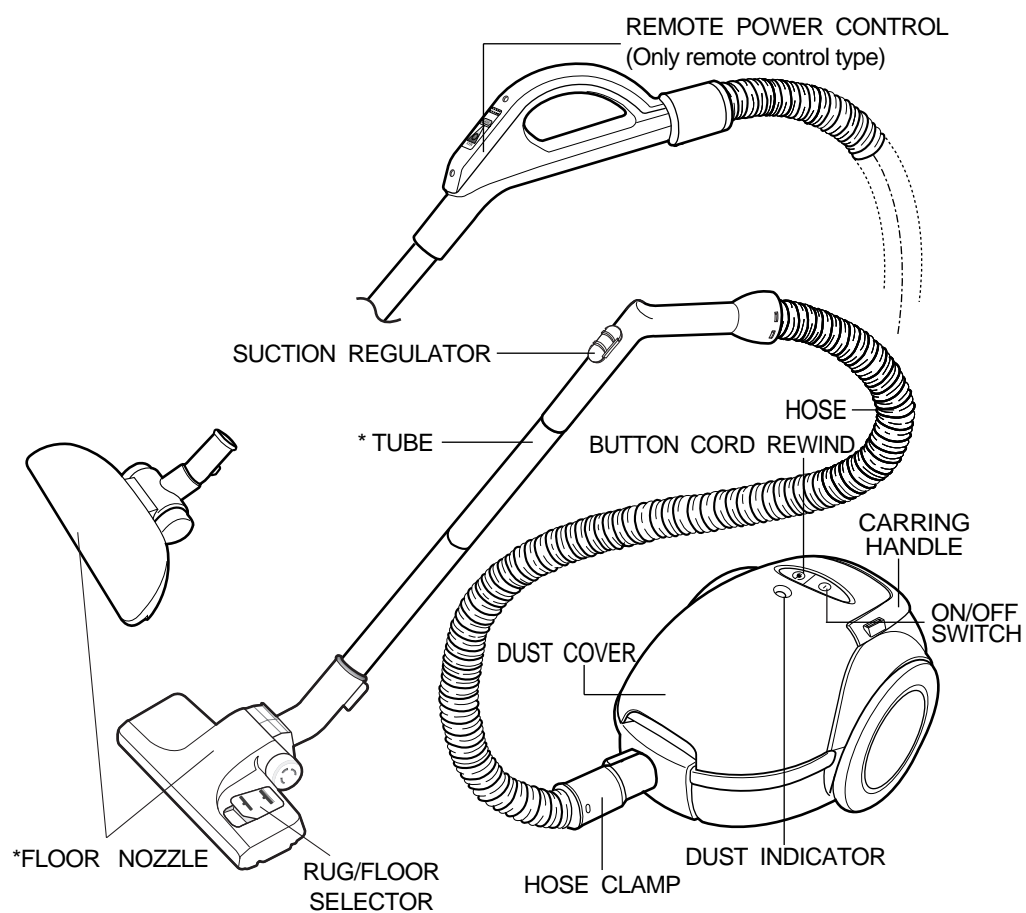

► Features marked * may vary according to model.

ASSEMBLING THE VACUUM-CLEANER READY FOR USE

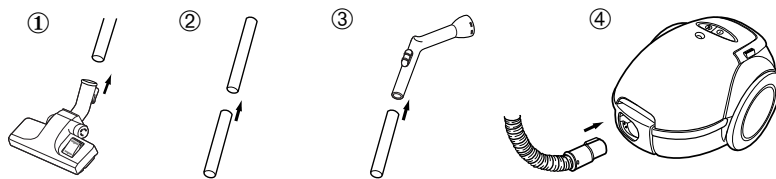


1. Slide the free end of the extension wand into the nozzle tube.
2. Slide the narrow end of one extension wand into the other extension wand.
3. Slide the extension wand into the handle end of the hose.
4. Slide the hose clamp into the suction inlet of the unit.

* **Option** Adjusting the telescopic tubes (depending on model)

*OPTION


EXTENDING : Holding narrow side of the telescopic tube with a hand, pull the handle to the opposite side of it with another hand.

SHORTENING : Push the handle to the narrow side of the tube, holding it with another hand.

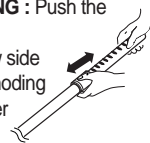

RUG/FLOOR SELECTOR

Before use make sure that the position of the select button is in the right position for the type of surface to be cleaned.

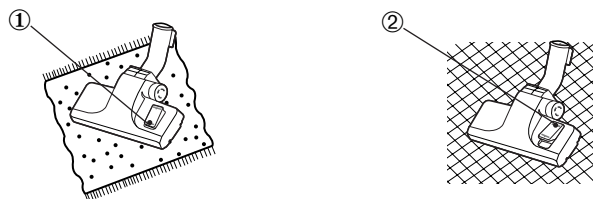


Push the side ① when cleaning the carpets.


Push the side ② when cleaning the floor, tile, mat, etc.

FOR UNIVERSAL BRUSH

Use the floor nozzle for cleaning smooth flooring, tiles, mats, carpet, etc.

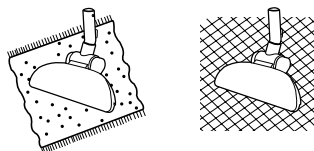

NOTE : After cleaning with floor brush keep it clean by using crevice tool in order to maintain best cleaning efficiency.

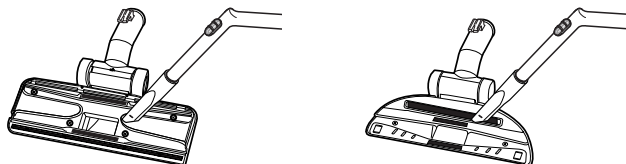


SUCTION POWER CONTROL (ONLY REMOTE CONTROL TYPE)

Your cleaner has a variable electronic suction control to give you greater versatility. Select the most suitable position according to cleaning needs.

HANDLE AND OPERATING CONTROLS (ONLY REMOTE CONTROL TYPE)

The suction capacity can be regulated steplessly by moving the slide to the desired position

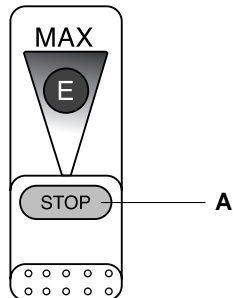

SLIDE IN THE STOP POSITION(A)

Vacuum cleaner switches off (stand by mode)

SLIDE TOWARDS MAX(A)

Suction capacity increases steplessly up to MAX.

DUST INDICATOR

You may continue cleaning until the dust indicator changes into the red color. This means the dust bag is full and needs to be replaced.



If the indicator suddenly works and the cleaner loses suction power while in use, turn your cleaner off and check whether the hose, pipe or nozzle is clogged.

When you check bag status by indicator, set motor power on maximum position.

DUST REMOVAL(DUST COVER)

NOTE : Hose must be disconnected before changing bag.
Replace the dust bag as soon as it is full.

1. To open the dust cover of the dust bag compartment, lift the cover upward.
2. Remove the dust bag from the cleaner.
3. Dispose of the full bag and insert the cardboard bag collar of the dust bag as far as it can go on the suction inlet, and press down the locker, position the dust bag so that no part of the bag is pinched.
4. Press the front of dust cover down lightly until it re-locks.

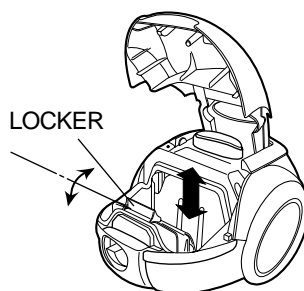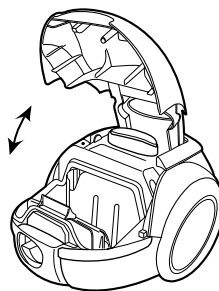

PAPER DUST BAG

After using, if the paper dust bag is full, dispose of it. Do not reuse.

CLOTH FILTER BAG

After using, if the cloth filter bag is full of dust, clean the cloth filter bag and use it again.


NOTE : There are two types of dust bag according to the model, one is paper dust bag type the other is cloth filter bag type.

CORD STORAGE

To extend the power cord for use, grasp the plug and gently pull out from the vacuum cleaner. When removing the power cord from the electrical outlet, switch off the power and grasp the plug.


Your cleaner is equipped with an automatic rewind button. When cleaning is finished, switch off power and disconnect the plug from the electrical outlet then press on the cord rewind button with your hand.

The cord will be rewound automatically.

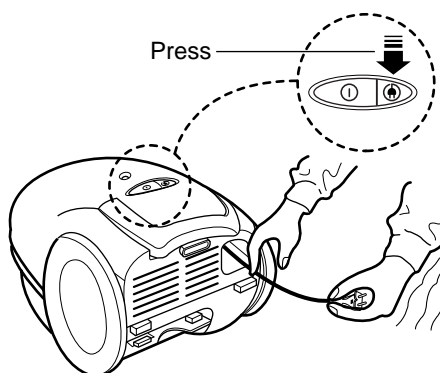

STANDS ON END


Your cleaner is designed to stand firmly upright for cleaning or storage. Use in this manner and it takes up a minimum of space, and allows you to work in the narrowest spaces.

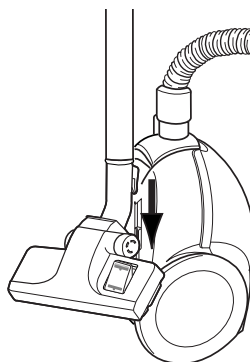


TOOL STORAGE

Your cleaner features an inside tool storage space.


It can be used to store cleaning tool while they are not in use.

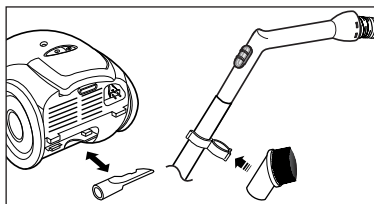

 ► Dusting brush for furniture, shelves, books, etc.



 ► Crevice tool for radiators, crevice, corners, between cushions.




USING & ASSEMBLING THE STRAP

This appliance is designed to be carried and available on the waist for your convenience. When cleaning steps, curtains, shelves, etc, carrying the unit with the strap on your shoulder.



Slide the lockers into its counterparts on the carrying handle, taking care of locking directions.

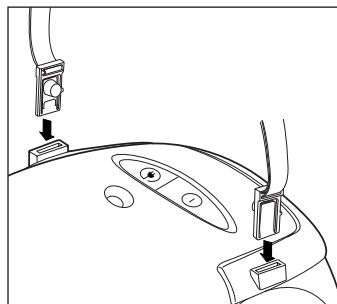

IF YOU HAVE A PROBLEM

This appliance was inspected thoroughly and was in good operating condition when it was shipped from the factory.

If a minor problem occurs, it usually can be solved quite easily when the cause is found.

Therefore, this check list is provided for your convenience.

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Cleaner Won't Run	1. Not firmly plugged in. 2. No voltage in wall plug.	1. Plug in firmly. 2. Check fuse or breaker.
Cleaner Doesn't Pick Up Properly	1. Dust bag is full. 2. Hose clogged with a large object.	1. Change dust bag. 2. Remove substance.